

HOW TO ELIMINATE CARTRIDGE CHIP DETECTION IN EPSON 7600/9600 PRINTERS

Use this procedure if you want to eliminate your printer from knowing how much ink is in the cartridges. This should only be used with bulk ink systems. Running your printer without ink can cause print head failure.

- 1. Use the [Paper Feed-] or [Paper Feed+] to move up or down the menu.*
- 2. Pressing the [SelecType] button will move you into the sub menu.*
- 3. Pressing the [Paper Source] button will move you back one menu item.*

Enter Maintenance Mode 2.

Power off → press "**Paper Source** " + "**Paper Feed (▽)**" +
"**cut/eject**" → then Power on

YOU WILL SEE "VIEW COUNTERS" DISPLAYED

PRESS "PAPER FEED (▽)" (2 X) UNTIL YOU SEE "SERVICE CONFIG" DISPLAYED

PRESS "SELECT TYPE" ONCE, THEN "PAPER FEED (▽)" (5X) UNTIL THE
DISPLAY READS " ED MODE" - PRESS ENTER

PRESS "PAPER FEED" UNTIL YOU SEE –

X = UK AND NORTH AMERICA – CHIP ON

N= ASIA CHIP ON

O= CHIP OFF ALL COUNTRIES

LEAVE WINDOW AT 0, *PRESS ENTER*, THEN POWER OFF. POWER ON. THE
SYSTEM WILL SHOW FULL CARTRIDGES AND THEY WILL STAY FULL. A 0 WILL
BE DISPLAYED IN THE WINDOW.